



JETSTREAM<sup>™</sup>
USER MANUAL 4.3



# Table of Contents

Table of Contents	1
Conventions Used in this Guide	3
Introduction	5
Approvals/Certifications	6
Definitions/Abbrevations	7
Jetstream	8
General safety regulations	10
Preparations	11
Regular maintenance service on your regulator	12
Assembly	13
Mounting the regulator on a tank	14
During a Dive	15
Cold Water Diving	16
After Diving	17
Product Markings	19
Other	19
Accessories	20
Support	20
Technical data	21
Product and Components	24



### Conventions Used in this Guide

This User's Guide is NOT intended for use as a training manual, or in any way as a substitute for proper training through a legitimate training agency approved by Poseidon AB. It is only intended to provide basic information concerning the Poseidon Jetstream Regulators.

Throughout this Guide, special alert boxes have been inserted to draw attention to critical information. Two levels of alerts are used in conjunction with color-coded symbols, as follows:

### **DANGER:**

Alert boxes that are RED contain extremely critical information related to the safety and well-being of the diver. Failure to comply with information contained in these boxes could lead to serious injury or death.

#### **WARNING:**

Alert boxes that are YELLOW contain vital information that may impact a diver's safety and/or proper function of the Poseidon Jetstream. Though generally not life-threatening, information contained in these boxes should not be ignored.

#### **IMPORTANT!**

Alert boxes that are BLUE contain important information about the proper care and maintenance of the Poseidon Jetstream, and that may increase diver comfort or enhance enjoyment during dives.

 
No part of this book may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage retrieval system, without permission in writing from an authorized representative of Poseidon Diving Systems AB.

Text, photographs and figures copyright © 2019 by Poseidon Diving Systems AB

ALL RIGHTS RESERVED

Manual Version 4.3 - October 2019

### **DANGER:**





### Introduction

Welcome, to the world of Poseidon divers. Here at POSEIDON we are very pleased that you have chosen one of the world's foremost diving regulators.

POSEIDON has been developing regulators for divers since 1958. Professional divers, military divers, and technivers choose POSEIDON equipment because of the high demands they place on our products - the same demands you have!

Your new regulator has been designed to provide you with a life time of pleasure as a POSEIDON diver. Our objective is that the equipment you use should not be noticeable, instead it should be at one with the experience and give you total freedom to achieve what every diver dreams about, the ultimate dive. To be at one with the water. To have full control and at the same time feel the weightlessness when, meter by meter you descent into a world of your own.

Nothing shall disturb your concentration. No wheels or knobs that need adjusting. No regulators that resist your breathing when you have reached your target depth. No suits that limit your freedom of movement or get damaged at the slightest encounter. This vision has accompanied Poseidon since the legendary diving enthusiast and engineer, Ingvar Elfström started the company in the late 50's. The same ideas motivate us now.

The name Poseidon represents constant development and improvement of diving equipment where everything is positioned correctly and everything functions, even in the most extreme situations.

Products developed in cold Scandinavian waters that are among the toughest you can dive in. If they work here, they will work anywhere. Poseidon's devoted followers are convincing proof of that. Thank you for your confidence.

#### Yours faithfully



# Approvals/Certifications

Jetstream is approved according to PPE Regulation 2016/425 (see Technical Data for full detail).

EN 250:2014 for cold water diving

EN 13949 for oxygen pressure shocks.

Type approvement certificate GB19/964597 and GB19/963694 is issued by:

SGS United Kingdom Ltd., Limited: 202b, Worle Parkway, Weston-super-Mare, BS22 6WA, United Kingdom Notified body number 0120

Production quality assessment according to regulation Module D is assessed by:

SGS United Kingdom Ltd., Limited: 202b, Worle Parkway, Weston-super-Mare, BS22 6WA, United Kingdom Notified body number 0120

Poseidon Diving Systems AB is certified according to ISO 9001





### Definitions/Abbrevations

Oxygen: any gas mixture containing greater than 21% oxygen up to 99.95% oxygen.

Trimix: a gaseous mix containing Oxygen, Nitrogen and Helium.

EAN 40: any gas mixture containing greater than 21% oxygen up to 40%. Enriched Air Nitrox.

IP: Interstage pressure; the pressure existing between the 1st stage and the 2nd stage valve.

HP: High pressure; the pressure inside the SCUBA cylinders, normally ranging between 300 bar (4351 psi) to 10 bar (145 psi)

Scfm: standard cubic feet per minute.

I/min STPD: standard temperature and pressure dry gas.

T.D.A: Thermo Dynamic Anti-Freeze.



### Jetstream

#### POSEIDON JETSTREAM MK3 (ART. NR 0100-005)

The first thing you should do, when you've bought a new Jetstream Mk3 regulator, is to check and make sure that all parts are included in the package.

Save all reciepts, as you will need those for any future warranty claim.



#### Jetstream Mk3 (art. nr 0100-005)

- 1 pcs first stage (art. nr 0110-000)
- 1 pcs second stage (art. nr 0120-005)
- 1 pcs low pressure hose, 70 cm/27,5 inch (art. nr 0130-000)
- 1 pcs user guide



#### Jetstream Octopus (art. nr 0100-006)

- 1 pcs second stage (art. nr 0120-006)
- 1 pcs low pressure hose, 90 cm/35,4 inch (art. nr 0130-002)
- 1 pcs user guide

If any of the above mentioned items are missing from the box, immediatly contact the shop where you bought the regulator.



#### POSEIDON JETSTREAM CLASSIC (ART. NR 3960)

Poseidon discontinued the classic Jetstream regulator in 2010, when Jetstream Mk3 was introduced. To high light any differences between the two models, we've included the classic model in this user guide.



#### Jetstream Classic (art. nr 3960)

- 1 pcs first stage (art. nr 3790)
- 1 pcs second stage (art. nr 0120-005)
- 1 pcs low pressure hose, 70 cm/27,5 inch (art. nr 0130-000)
- 1 pcs user quide



#### Jetstream Octopus (art. nr 0100-006)

- 1 pcs second stage (art. nr 0120-006)
- 1 pcs low pressure hose, 90 cm/35,4 inch (art. nr 0130-002)
- 1 pcs user guide

### **IMPORTANT!**

Low pressure hose with article number 4680-70 and 4680-90 has a built in over pressure valve.

Jetstream Classic can be updated with hose adapter 0000-130 (accessory) so that a low pressure hose with a 9/16" connection can be used. Note that if this hose adapter is used, the first stage used MUST have a built in over pressure valve or an external over pressure valve connected to a low pressure port (art. nr 3285).



## General Safety Instructions

Poseidon only warrants the regulator performance as specified herein, and cannot be held responsible for improper preparations, incorrect gas mixing and planning, or diving beyond individual medical, psychological and physical limitations.

#### LIMITATIONS OF USAGE:

Inhaling cold gas and exhaling warmed gas, represents energy losses of the human body (thermal imbalance, hypothermia). This effect increases with increasing depth and can result in a sudden unconsciousness. Diving to extreme depths this effect must be considered, calculated and planned for and preventive actions must be taken, such as proper thermal protection and pre-heated gas.

Jetstream Mk3 / Jetstream Classic / Jetstream Octopus is for unlimited use in water temperatures from water freezing temperature +4°C to +50°C (122°F). The freezing temperature depends on salt content. When diving in waters with a temperature of +10C/+50F or lower, the first stage 3790 (Jetstream Classi) should be fitter with the freeze protection cap (art. nr 1286).

Diving with gas blends other than air, or deeper than 18 m (59 ft), or in overhead environment, requires special training regarding practices, equipment, physical and medical understanding. This manual assumes the reader has some basic knowledge in those respects. Diving is a strenuous physical activity. Its difficulty may be increased by conditions such as cold water, poor visibility, hard work, and increased depth. Always try to exercise prudent judgement when determining whether or not to dive. Never dive when tired or in poor health.

Diving deeper than 50m (164 ft) using gasses other than air is more demanding on the equipment. Most equipment on the market is only approved for use within EN 250 limits.



#### **WARNING:**

The Jetstream regulators are not designed to be breathed up on by more then one person at a time. If you configure your Jetstream regulator for more then one diver to breath from it at a time, the cold water performance may not meet minimum safety standards.



## Preparations

Your regulator is life support equipment and it should be handled with care and maintained and checked regularly.

Before each dive, we recommend that you check the following things on your regulator:

- Perform a visual inspection of your equipment to make sure there are no damage or defects. If damage or defects are detected, or you suspect that the equipment is damaged or defective, do NOT use the equipment until it has been checked, and if needed, repaired by a service technician certified to service/repair Poseidon equipment.
- The Poseidon Low pressure hoses are equipped with an inspection hole, allowing you to verify that the hose and connection are properly assembled. Before each use, verify that you can see the rubber hose in the inspection hole. If you do not see any rubber in the inspection hole, the hose should be discarded IMMEDIATLY and NOT used, as it will pose an immediate risk of a hose failure/ accident. Diving with a hose where rubber isn't visible in the inspection hole can be life threatening!



- We recommend that you regularly replace your low pressure hoses to avoid situations where your safety is jeopardized by using worn out hoses. It is often difficult/impossible to tell from the outside of a hose, if it is about to fail. Rubber, the material the hose is made out of, ages over time and do not last forever. Replacing your LP hoses every 5 6 years is advisable.
- Make sure all visible o-rings (hose connections and ISO 12029 connection) are properly assembled and without any damage. To minimize the number of times where you have to abort a dive due to bad o-rings, we recommend that you always keep a spare set of o-rings in your dive bag. Note that o-rings over time dry out and their functionality is reduced, thus these should be replaced periodically.

# Regular maintenance service on your regulator

Your regulator is life support equipment and it should regularly undergo maintenance service to minimize the risk of failure, accidents and injury.


We recommend that maintenance service should be performed about once every 100 dives or biannual, whatever comes first. Maintenance service should be performed by a service technician that is certified to service Poseidon equipment and only Poseidon original parts should be used.

It's recommended that you keep a record of the dates when service has been performed, in the Notes section of this user manual, so that you can keep track of when the next service is due.




## Assembly

#### Before you assemble your Jetstream regulator, please pay attention to the following:

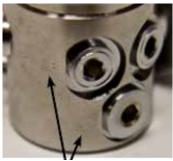

Low- and high pressure ports, Jetstream Classic

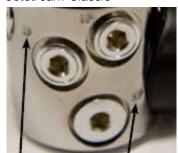

Low- and high pressure ports, Jetstream Mk3



Hose connection, Jetstream Mk3

- The first stage on a Jetstream Classic has four (4) low pressure ports and two (2) high pressure ports. These different types of ports are marked with R/LP for the low pressure ports and HP for the high pressure ports. The port marked with R has a slightly higher flow rate then the other low pressure ports and this is the port where you preferably mount your primary second stage.
- The first stage of a Jetstream Mk3 has five (5) low pressure ports and two (2) high pressure ports. These different types of ports are marked with IP for low pressure ports and HP for high pressure ports. All low pressure ports provide the same airflow.
- Low and high pressure ports have different thread size to avoid accidently mounting components in the wrong port. If a hose connection does NOT fit in a port, do not use force/violence to connect the hose to the port. This could lead to accidents and injury.
- Jetstream Mk3 is delivered with a hose adapter that makes it possible to use a low pressure hose with a 9/16" connection. It is possible to update a Jetstream Classic with this hose adapter (accessory) but if this is done, make sure the first stage used is equipped with an over pressure valve.



#### **IMPORTANT!**

Inspect the o-ring, and make sure it is absolutely free from particles and/or grease. Do not touch the o-ring. Grease and particles can cause a fire.

# MOUNTING THE REGULATOR ON A TANK

The procedure below only describes the way you mount the regulator and it does not replace all the steps you've learnt during your dive training.

- Carefully open the tank valve and clear any dirt/debris/water in the valve connection. Then close the valve.
- Remove the protective cap from the first stage ISO 12029 connection.
- Make sure the o-ring on the first stage ISO 12029 connection is mounted and without any damage. Then mount the first stage on the valve. Turn the connection wheel until you can feel that the first stage is firmly attached to the valve.
- Carefully open the tank valve completely and then turn the valve knob half a turn in reverse.
- Purge the second stage a couple of times, to clear the second stage of any debris left from the previous dive.
- Check the pressure gauge to make sure the tank is full.
- Breath on the primary second stage and the octopus to make sure they work (provide air). If the inhalation air smell or taste bad, the air in the tank should be replaced.
- The regulator is now ready to dive with.

## During a Dive

What is most distinctive about the Jetstream is that they are easy to use – there aren't any valves or knobs to change the flow of air, breathing resistance, etc., only a switch that makes freeflowing more difficult when jumping in to the water.

You can leave the function and performance of the regulator in our hands and concentrate on what you want to do - dive.

Jetstream allows for ease of breathing and supplies air in a reliable manner.

#### A few things worth noticing:

- There's no "up or down" on the Jetstream second stage. Regardless of which way you place the mouthpiece in your mouth, the second stage will always work and provide all the air you need.
- There are no functionality- or construction differences between a primary second stage and an Octopus. The only difference is the color.
- Water in the cylinder is the most common cause of freezing regulators.
- Jetstream (USA=Odin) is fitted with a switch with + and positions. Since
  this regulator has extremely low inhalation resistance and high air flow, it
  can permit air to flow freely when not held in the mouth. During diving and
  long-term storage, the switch should always be set to the + position.
- When a second stage is used as an Octopus (alternative air source) or when swimming on the surface and the second stage is not in the divers mouth, the +/- switch may be in the -position but it's recommended that it's in the +position if possible.



## Cool Water Diving

The Jetstream Classic regulator is marked with EN250A>10°C but is also approved for cold water use with the anti freeze cap mounted. Then the regulator meets the requirements under EN250A>4°C. For diving in conditions below 10°C use Poseidon anti freeze cap article number 1286.

Instalment of anti-freeze cap No 1286 on first stage.

During diving in cold water, i.e. temperatures lower than +10°C (+50°F), the outer spring housing of the first stage should be provided with an anti-freeze cap.



#### Instalment of anti-freeze cap.

- tighten the valve cover with a torque wrench to 28-30 Nm
- blow the inside of the valve cover clean and dry
- then fill the valve cover and the antifreeze cap with pure spirit (40%) or water/glycol mixture

Make sure of that all air disappears out of the valve cover, place a finger against the hexagon hole, turn the first stage and submerge the upper part of the valve cover in to the liquid, remove the finger.

I the anti-freeze cap and fasten it with the locking straps.

Press the anti-freeze cap and check so there are no leakage.

The antifreeze cap can be kept installed regardless of season.



### After Diving

The regulator should always be rinsed while it is still mounted on the tank. The regulator should beunder pressure, otherwise water can enter either the first or the second stage and cause the build up of ice during your next dive!

If water enters your first stage, corrosion could form inside the first stage leading to loss in performance and/or failure. If you suspect water has entered the first stage we recommend that you let a service technician, certified to service/repair Poseidon equipment, disassemble your first stage to dry and clean it.

- The regulator should be rinsed in fresh water after every dive so as to avoid salt crystal formation around the functional parts. Purge the second stage while you rinse it, to allow fresh water to access all parts of the second stage.
- Blow the equipment dry by using air pressure.
- After rinsing, close the cylinder valve and purge the regulator.
- Unscrew the regulator from the tank and mount the protective cap onto the connection.
- Pack and store your regulator in your regulator bag. This protects the regulator from damage. It is especially important to protect the connection areas.

The regulator should not be stored in direct sunlight and/or at high temperatures.

# OXYGEN ALERT!

Never unscrew a pressurised regulator from the tank. This can create a jet of gas over the o-ring and cause a fire.

#### **WARNING:**

 
Never use the 1st stage housing to unscrew the regulator from the tank. This can fully or partly unscrew the connection stem from the housing, and create a future hazard. Always use the handwheel.

 
#### WHAT YOU DO YOUR SELF

After every dive the equipment should be cleaned according to the instructions in "After diving." The regulator does not have to be lubricated beyond what is done by Poseidon.

It is how ever recommended that you regularly lubricate the o-rings located on the low- and high pressure hoses and the first stage ISO 12029 connection. This will reduce the risk of leakage and prolong the lifetime of the o-rings.

#### **IMPORTANT**







# Product Markings

Jetstream Mk3, Jetstream Classic och Jetstream Octopus are marked with CE 0120 and EN 250. The markings show that the product meets or exeeds the requirements of PPE Regulation 425/2016 and the harmonized standard EN 250:2014 for SCUBA equipment.

### Other

- A regulator is primarialy constructed of brass and recyclable plastic, both of which can be recycled.
- Do not use cleaning chemicals of any kind to clean the regulator. Neither may silicone or any other lubricant be poured or sprayed into the regulator.
- Interstage pressure (IP) and safety valve opening pressure is preset by Poseidon and readjustment is prohibited. Readjustment of IP will never boost performance.
- The use of accessories which have not been recommended can seriously impair the function of your equipment.
- Pressure-gauge hoses without a restriction in the connection can, if the hose is punctured, allow a powerful jet of air to escape.
- Self-made and/or by Poseidon unauthorized changes/modifications to the product may lead to reduced functionality and failure, resulting in personal injury or death. Poseidon are NOT responsible for equipment where modifications beyond product specifications have been made and any/all warranty claims will be turned down.
- Poseidon is NOT responsible for any parts/components manufactured by any party/company other then Poseidon, mounted on Poseidon equipment.
- The air supply used shall meet the requirements for breathable air in accordance with EN 12021

## **WARNING:**

The use of accessories which have not been recommended, can seriously impair the function of your equipment.

Pressure-gauge hoses without a restriction in the connection can, if the hose is punctured, allow a powerful jet of gas to escape.



### Accessories

Jetstream Mk3 (art. nr 0100-005) / Jetstream Classic (art. nr 3960) can be used with the following accessories:

- All Jetstream Octopus (art. nr 0100-006 and 2970)
- Yoke adapter (for fist stage 3790 with ISO 12029 connection)
- Swiveling connection 90° 3/8" for low pressure hoses
- Banjo connection 90° 7/16" for pressure gauges
- Poseidons anti-freeze cap (art. nr 1286). (Only on first stage 3790)
- All EN250 approved pressure gauge hoses
- Pressure gauges and dive computers, as long as they are connected using an EN250 approved pressure gauge hose
- EN250 approved low pressure hoses
- · Poseidon original connections for adapting to different thread sizes
- EN250 approved inflator hoses

## Support

When you purchase a POSEIDON product you receive access to thousands of authorized service outlets world wide. More information can be found and the latest manual is available for download on POSEIDON's homepage www.poseidon.com.

Poseidon's goal is to resolve errors/problems, covered by our warranty terms, as close to the end consumers as possible, thus resolving these issues as quickly and easy as possible. Thus Poseidon has created a working infrastructure for warranty case handling,

If you have a warranty claim on a Poseidon product, please contact the dive shop where you purchased your product. If this isn't possible, contact the Poseidon representative in the country/market where you reside. When claiming warranty, proof of purchase must be submitted.

Contact information to our partners around the world can be found at www.poseidon.com.



# Technical data



Jetstream Mk3, art. nr 0100-005

Regulator 0100-005		
Approved to depth (m/ft):	50 m / 164 ft	
Intermediate pressure (bar / psi):	8,5 bar / 123 psi	
Nitrox:	Yes max EAN 40	
100% oxygen:	No	
Trimix (max 21% oxygen):	Yes	
Compressed air:	Yes	
Working pressure 300 bar / 4350 psi:	Yes	
EN250 approved:	Yes	
CE approved:	Yes	
LP hose length standard (cm / inch):	70 cm 27,5 inch	

First stage 0110-000		
Connection ISO 12029:	Yes	
Connection fixed Yoke:	No	
Technology:	Membrane	
Valve technology:	Ball	
Wheel mounted:	Side	
Low pressure ports:	5	
High pressure ports:	2	
Flow rate (I / min / cft/min):	5500 / 194	
Oxygen clean:	No	
Built-in over pressure valve:	Yes	
Anti-freez protection:	Built-in	

Second stage 0120-005		
Color:	Black	
Material:	ASA, Stainless steel, Brass	
Weight (gram/oz):	190 gr / 6,7 Oz	
VVolyme (ml / fl. oz)	80 ml / 2,7 fl. oz	
Valve technology:	Upstream	
Flow rate (I / min / cft/min):	1800 l/min 63,5 cft/min	





Jetstream Classic, art. nr 3960

Regulator 3960		
Approved to depth (m/ft):	50 m / 164 ft	
Intermediate pressure (bar / psi):	8,5 bar / 123 psi	
Nitrox:	No	
100% oxygen:	No	
Trimix (max 21% oxygen):	Yes	
Compressed air:	Yes	
Working pressure 300 bar / 4350 psi:	Yes	
EN250 approved:	Yes	
CE approved:	Yes	
LP hose length standard (cm / inch):	70 cm 27,5 inch	

First stage 3790		
Connection ISO 12029:	Yes	
Connection fixed Yoke:	Yes (3790 10)	
Technology:	Membrane	
Valve technology:	Piston	
Wheel mounted:	Side	
Low pressure ports:	4	
High pressure ports:	2	
Flow rate (I / min / cft/min):	5100 / 180	
Oxygen clean:	No	
Built-in over pressure valve:	Yes	
Anti-freez protection:	Accessory (1286)	

Second stage 0120-005		
Color:	Black	
Material:	ASA, Stainless steel, Brass	
Weight (gram/oz):	190 gr / 6,7 Oz	
VVolyme (ml / fl. oz)	80 ml / 2,7 fl. oz	
Valve technology:	Upstream	
Flow rate (I / min / cft/min):	1800 l/min 63,5 cft/min	





Jetstream Mk3 & Classic Octopus, art. nr 0100-006

Jetstream Mk3 Octopus		
Color:	Yellow	
Material:	ASA, Stainless steel, Brass	
Weight (gram/oz):	190 gr / 6,7 Oz	
VVolyme (ml / fl. oz)	80 ml / 2,7 fl. oz	
Valve technology:	Upstream	
Flow rate (I / min / cft/min):	1800 l/min 63,5 cft/min	
Oxygen clean:	Yes max EAN 40	
LP hose length standard (cm / inch):	90 cm 35,4 inch	
Tested to:	50 m / 164 ft	

# Product and components

Product	Article Number
Breathing Regulator (box marking) Poseidon Jetstream Mk3 Poseidon Jetstream Classic	0100-005 3960
1st stages (item marking) Poseidon Jetstream Mk3 Poseidon Jetstream Classic	0100-000 3790
2nd stages (item marking) Poseidon Jetstream Poseidon Jetstream Octopus	0120-005 0120-006
Jetstream hoses Standard hose, length 70cm Standard hose, length 90cm Standard hose, length 110cm Standard hose, length 150cm Standard hose, length 215cm Standard hose, length special Standard hose, length 70cm Black Standard hose, length 90cm Black	0130-000 0130-002 0130-006 0130-008 0130-010 0130-012 0130-036 0130-037
Mouthpiece AIR	4532

Declaration of conformity:

https://poseidon.com/docs

This PPE protects the user from the following risks:

- Drowning
- Various nuisance factors
- Usage of materials that can affect the human body
- Design defects
- Incorrect use

# Poseidon Diving Systems AB

Åkeredsvägen 1, SE-421 63 Västra Frölunda, Sweden Phone: +46 31 734 29 00 E-mail: info@poseidon.com

www.poseidon.com

